



Configuration Wifi du modem routeur SAGEM 2404


1. Accédez à l'interface du modem via l'adresse **192.168.1.1**

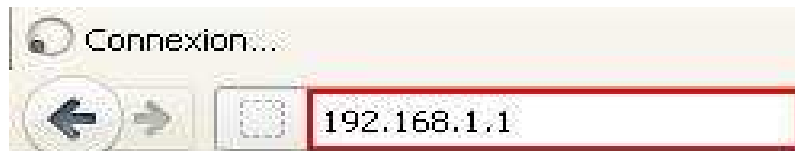

2. Saisissez « **admin** » comme Utilisateur et Mot de passe puis cliquez sur « **ok** »

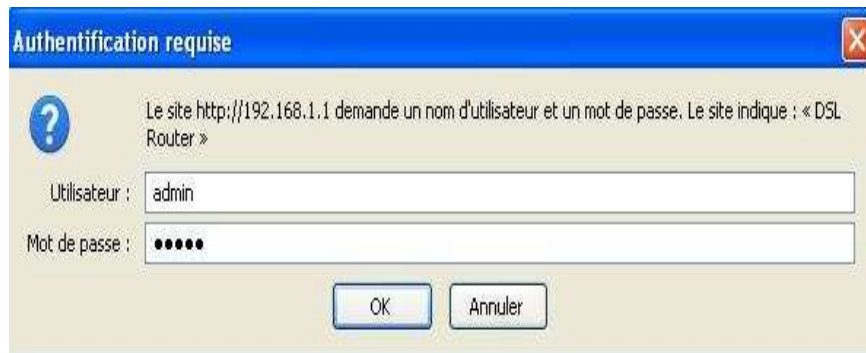

3. Passez sur « **Wireless** » et cochez la case « **Enable Wireless** » pour activer le wifi.
4. Tapez le nom du réseau « **SSID** » voulu puis choisissez « **ALL CHANNELS**» dans le champ « **Country**».
5. Dans le champ « **Channel** », Choisissez **7 ; 10** ou **11** comme canal pour le wifi.
6. Choisissez « **WPA-PSK** » dans le champ « **Network Authentication**» puis saisissez votre **mot de passe WIFI** composé de 8 caractères au minimum dans le champ « **WPA Pre-Shared key** ».
7. Cliquez sur « **Save/Apply** » en bas de la page.

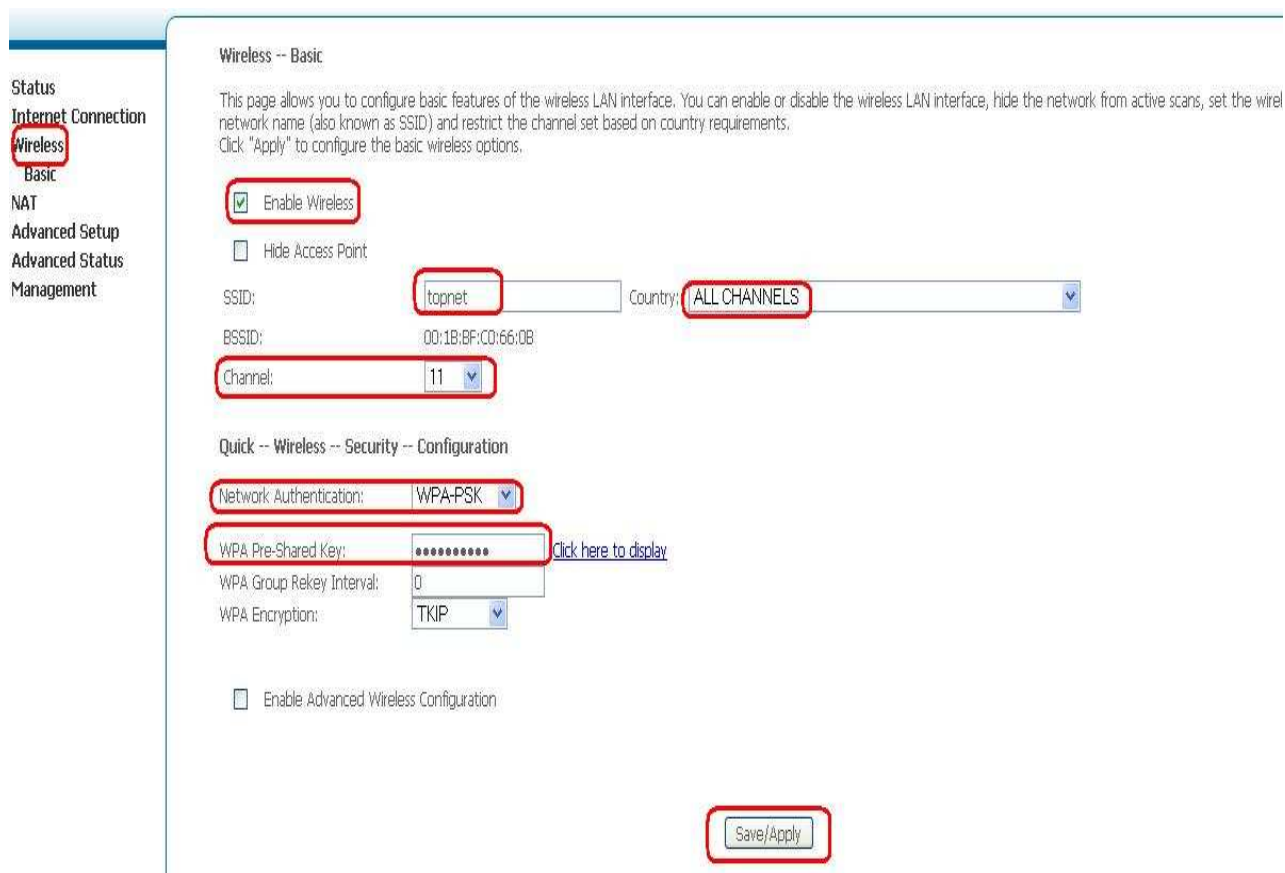

Wireless -- Basic

This page allows you to configure basic features of the wireless LAN interface. You can enable or disable the wireless LAN interface, hide the network from active scans, set the wireless network name (also known as SSID) and restrict the channel set based on country requirements. Click "Apply" to configure the basic wireless options.

Enable Wireless

Hide Access Point

SSID: topnet Country: ALL CHANNELS

BSSID: 00:1B:BF:CO:66:0B

Channel: 11

Quick -- Wireless -- Security -- Configuration

Network Authentication: WPA-PSK

WPA Pre-Shared Key: [Click here to display](#)

WPA Group Rekey Interval: 0

WPA Encryption: TKIP

Enable Advanced Wireless Configuration

Save/Apply