



Paramétrage Wifi du modem routeur Sagem 2604


1. Accédez à l'interface du modem via l'adresse **192.168.1.1**



2. Saisissez « **admin** » comme Utilisateur et Mot de passe puis cliquez sur « **OK** ».

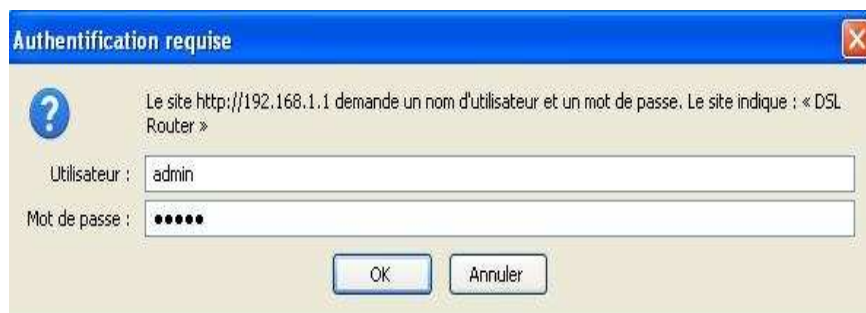

3. Passez sur « **Wireless** » et cochez la case « **Enable Wireless** » pour activer le wifi.
4. Tapez le nom du réseau « **SSID** » voulu puis choisissez « **Tunisia** » dans le champ « **Country** ».
5. Dans le champ « **Channel** », Choisissez **7, 10** ou **11** comme canal wifi.
6. Choisissez « **WPA-PSK** » dans le champ « **Network Authentication** » puis saisissez votre **mot de passe WIFI** composé de 8 caractères au minimum dans le champ « **WPA Pre-Shared key** ».
7. Cliquez sur « **Save/Apply** » en bas de la page.

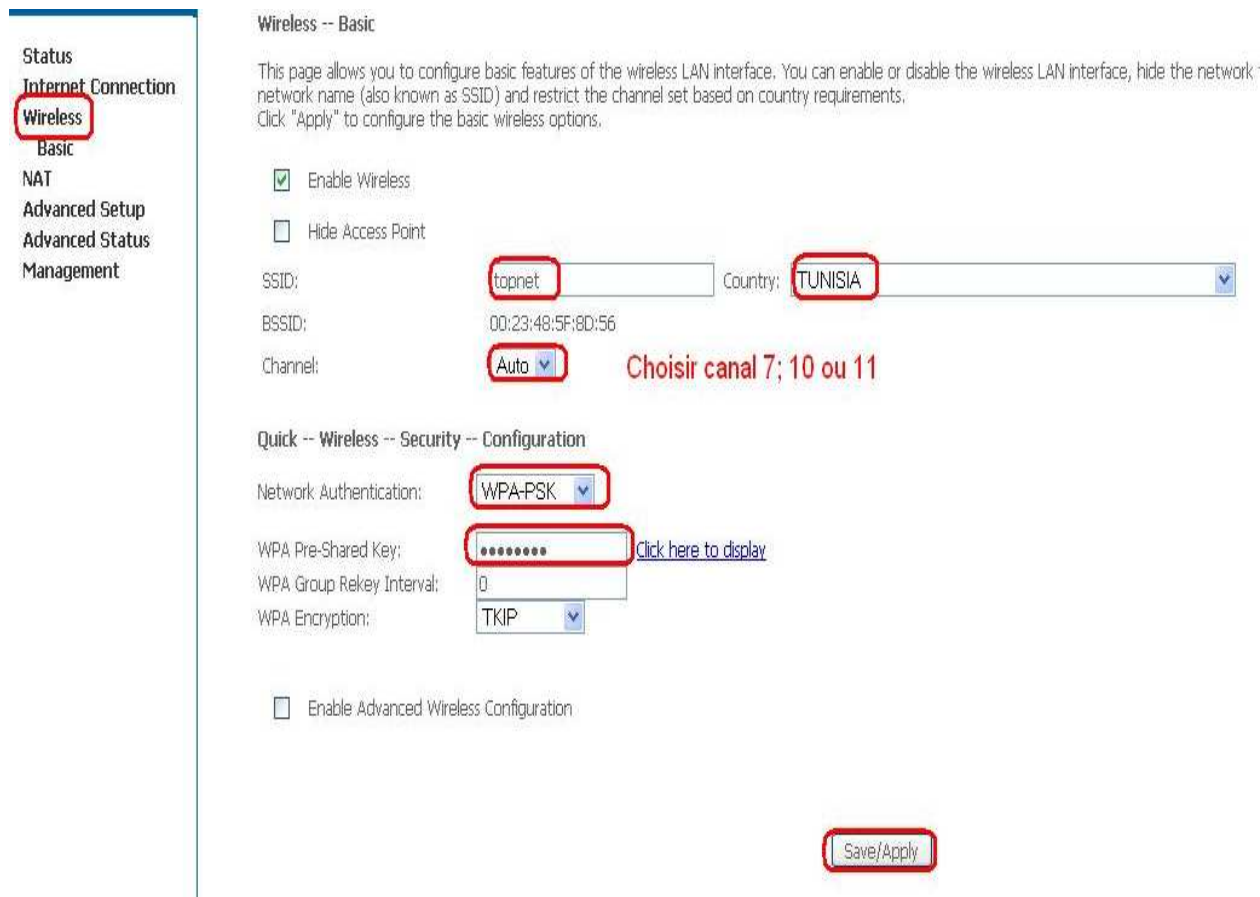

Wireless -- Basic

This page allows you to configure basic features of the wireless LAN interface. You can enable or disable the wireless LAN interface, hide the network name (also known as SSID) and restrict the channel set based on country requirements. Click "Apply" to configure the basic wireless options.

Enable Wireless

Hide Access Point

SSID: Country:

BSSID: 00:23:48:5F:8D:56

Channel: Choisir canal 7; 10 ou 11

Quick -- Wireless -- Security -- Configuration

Network Authentication:

WPA Pre-Shared Key: [Click here to display](#)

WPA Group Rekey Interval:

WPA Encryption:

Enable Advanced Wireless Configuration